

REMINGTON®

Keratin Protect Dryer



AC8002

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.
Remove all packaging before use.

IMPORTANT SAFEGUARDS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Warning - for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice*.
- 3 For UK household use only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 4 Do not put the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.
- 5 Keep direct airflow away from eyes or other sensitive areas.
- 6 Avoid allowing any part of the hairdryer to come into contact with the face, neck or scalp.
- 7 In use, take care that the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the appliance to cool down.
- 8 Ensure the inlet grille is free from obstructions such as household fluff, loose hair etc.
- 9 Do not leave the appliance unattended while plugged in.
- 10 Do not set the appliance down while still on.
- 11 Do not use attachments other than those we supply.
- 12 Do not twist or kink the cable, or wrap it round the appliance.
- 13 Do not use the appliance if it is damaged or malfunctions.
- 14 If the cable is damaged return the appliance, to avoid hazard.
- 15 This appliance is not intended for commercial or salon use.
- 16 Let the appliance cool down before cleaning and storing away.
- 17 **WARNING:** Contains traces of nuts.





KEY FEATURES

- 1 Advanced ceramic grill infused with Keratin and Almond oil
- 2 3 heat settings
- 3 2 speed settings
- 4 Cool shot
- 5 7mm slim concentrator
- 6 11mm concentrator
- 7 Diffuser
- 8 Removable easy clean rear grille
- 9 Hang up loop
- 10 Cord

PRODUCT FEATURES

- Advanced ceramic coated grille infused with Keratin and Almond Oil.
- 2200 Watts.
- Ion generator for smooth frizz free styling.
- AC long life motor.

INSTRUCTIONS FOR USE

- 1 Wash and condition your hair as normal.
- 2 Squeeze out excess moisture with a towel and comb through.
- ★ Hair sprays contain flammable material – do not use while using the dryer.
- 3 Plug in the dryer.
- 4 Select desired temperature and speed setting using the switches on the handle.
- 5 For fast drying and to remove excess moisture from the hair use dryer on high heat/high speed with the 11mm concentrator.
- 6 To create smooth styles use the 7mm slim concentrator and a round hair brush (not included) whilst drying.
- 7 To enhance natural curls and waves attach the diffuser to the dryer. Turn head upside down and gently place hair into the diffuser bowl rotating the dryer in your hand slightly as you style.
- 8 To create extra volume at the roots of the hair, keep head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp. Be careful not to burn the scalp. Dry gently on a low heat/low speed setting.
- 9 To set the style press the cool shot button whilst styling. Release it to reactivate heat.
- 10 When finished, turn the appliance off and unplug.

CLEANING AND MAINTENANCE

- Unplug the appliance and let it cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove dust and dirt from the rear grille and clean with a soft brush.
- To remove the rear grille for cleaning hold the dryer handle in one hand, then with the other place your thumb and index finger on the indents either side of the rear grille. Pull the rear grille away from the dryer.

- To replace the rear grille hold in place with thumb and index finger again and click back onto the dryer.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.

