

# REMINGTON®

## PRO-Luxe 32mm Tong




CI9132

 [www.remington.co.uk](http://www.remington.co.uk)

Register online for an **EXTRA** year guarantee

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.

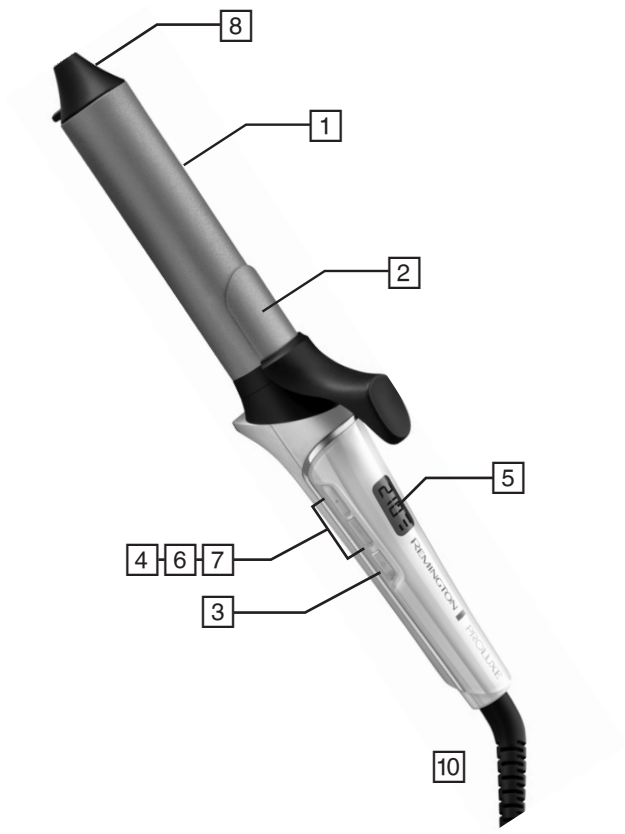


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

**WARNING: This appliance is hot. Keep out of reach of children at all times.**

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
  -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
  - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom\*.
- \* Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
  - Never leave the appliance unattended when it is connected to the power supply.
  - Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface.

- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

- |                         |   |
|-------------------------|---|
| 1. 32mm barrel          | 7. Temperature lock function                |
| 2. Tong clip            | 8. Cool tip                                 |
| 3. On-off switch        | 9. Heat resistant pouch and mat (not shown) |
| 4. Temperature controls | 10. Swivel cord                             |
| 5. Temperature display  |   |
| 6. Pro+ setting         |   |

---

## ADDITIONAL FEATURES


---

- Fast heat up—ready to use in 30 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

---

## INSTRUCTIONS FOR USE

---

- Before use, ensure the hair is clean, dry and tangle-free.
- Section the hair prior to styling. Style the lower layers first.
- 1. Plug the product into the mains power supply.
- 2. Press and hold the on/off button to switch on.
- 3. When your wand is plugged in but not turned on the lock symbol  will come on to show that it is in standby mode.
- 4. Select the appropriate temperature for your hair type using the "+" and "-" temperature controls. Start styling on lower temperatures first.
- 5. The "+" button will increase the temperature and the "-" button will decrease the temperature.

## Recommended Temperatures

| Temperature   | Hair type                             |
|---------------|---------------------------------------|
| 120°C - 170°C | Thin / fine, damaged or bleached hair |
| 170°C - 200°C | Normal, healthy hair                  |
| 200°C - 210°C | Thick and difficult to style hair     |

**Caution:** the hottest temperatures should only be used by experienced stylists.

- The temperature display will flash until the selected temperature is reached.
- Working on one section at a time, open the tong clip, place a section of hair between the tong clip and the barrel and release the clip at the end of the hair.


NOTE: for best results, ensure the ends of the hair are under the clip. If they aren't, gently glide the styler down the hair until you can no longer see the ends.

- Wait about 10 seconds for the curl to form.
- Unwind the hair and release the curl.
- Repeat this around the head to create as many curls as desired.
  - After use, press and hold the off button to turn off then unplug the appliance.
  - Tip:** let the curls cool before styling or brushing; this will help to prolong the curls.

### Pro+ SETTING

To activate, press and hold '+' for 2 seconds, this automatically selects the temperature at 185°C for healthier styling.

### Temperature Lock Function

To activate, press and hold '-' for 2 seconds. The  symbol will appear and all the keys will be locked. To deactivate press the '-' for 2 seconds.

---

## CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister)

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.


\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---


## SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)  
Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK  
[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40  
Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12  
[www.ie.remington-europe.com](http://www.ie.remington-europe.com)

---

## REGISTER ONLINE

---

Register online for an EXTRA year guarantee\*.

**Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister)**

\*You must register within 28 days of purchase.

# Model No. CI9132

18/UK/ CI9132 T22-7000674 Version 11 /18

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2018 Spectrum Brands, Inc.