REMINGTON®

Jumbo Rollers



H5670





Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- When the appliance is used in a bathroom, unplug it after use since the
 proximity of water presents a hazard even when the appliance is switched
 off
- For additional protection, the installation of a residual current device (RCD)
 having a rated residual operating current not exceeding 30 mA is advisable
 in the electrical circuit supplying the bathroom*.
 - * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- Do not allow any part of the appliance touch the face, neck or scalp.

- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- · Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- Always keep the lid closed while the rollers are heating.
- Ensure there is a roller on each slot while the unit is heating and that each roller is
 properly inserted into the base unit.
- DO NOT USE ON ARTIFICIAL HAIRPIECES OR WIGS.
- This appliance is not intended for commercial or salon use.

PARTS

- 1. Velvety flocked rollers:
 - 4 x 40mm rollers (large)
 - 8 x 35mm rollers (medium)
- Colour coded clips (not shown)
- 3. Colour coded pins (not shown)
- 4. On indicator light
- 5. Cool touch end
- 6. Base unit

INSTRUCTIONS FOR USE

Before use, ensure the hair is clean, dry and tangle-free.

- For extra protection use a heat protection spray.
- Hairsprays contain flammable material do not use while using this product.
- Section the hair prior to styling. Style the lower layers first.
- Plug the product into the mains power supply.
- CAUTION: the appliance will begin to heat-up as soon as the power supply is switched on.
- The lid should be in the down position until the rollers are ready to use.
- The rollers will start to heat up in 3 minutes. Allow 10 minutes for them to reach the
 optimal curling temperature.
- When you feel your setters are ready, open the lid for 1 minute and begin use.

TO CURL

- Select the desired size of roller. Use the small rollers for tighter curls; the larger rollers give looser curls and waves.
- 2. Take a section of hair, about the width of the roller.
- Wrap the ends of the hair around the roller, keeping the hair at right angles to the scalp.
- 4. Wind the roller right down to the roots.

- Secure the roller firmly in place with the correct size pin or clip, as near to the scalp as possible.
- Repeat with the next section of hair.
- Leave all the rollers in the hair until the rollers and hair have fully cooled down and set the style.
- 8. Note: Use fixing spray to help set and keep your style for longer.
- 9. Remove the rollers from your hair by gently unwinding.
- Let the curl spring back into place and leave the hair to cool fully before styling to ensure the optimum set.

FOR VOLUME

- 1. Use the largest rollers provided.
- 2. Roll the top, front layer of the hair back to your crown, using one roller.
- Next, use three other rollers to roll the remaining hair in three equal sections on the back and sides of the head.
- 4. Roll the hair under, up the nape of the neck.

FLICKED OUT

- Use the largest rollers provided.
- 2. Roll the hair back and under to the crown to give height.
- Take large sections all around the sides of your head, and roll up so the hair will flip out.
- 4. You should roll the curlers up to the level of the top of your ear. Leave the rollers in place for approximately ten minutes.
- 5. Unroll the curlers in the order that you put them in, let the curl cool for a minute to set
- 6. Next, brush your hair out, using your hands to shape the flip outward.
- 7. Unplug the unit after you have used all the rollers you need.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- · Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.
- Dry rollers completely before replacing in the unit.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: https://uk.remington-europe.com/product-registration

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

** 0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk
Product support:
productsupport@remington.co.uk

IRELAND

3 142 951 40

Remington Consumer Products, Unit B12, Ballymount Corporate Park, Ballymount, Dublin 12 https://ie.remington-europe.com Product support: product support@remington.co.uk

Ref. No. H5670

Type No. H5670

20/UK/ H5670 T22-7001780 Version 09 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd Fir Street,

Failsworth.

Manchester

M35 0HS

remington-europe.com

© 2020 Spectrum Brands, Inc.