

REMINGTON®



Official Electrical Styling Partner of Manchester United

Beard Boss Styler





MB4128

 www.remington.co.uk

Register online for an **EXTRA** year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

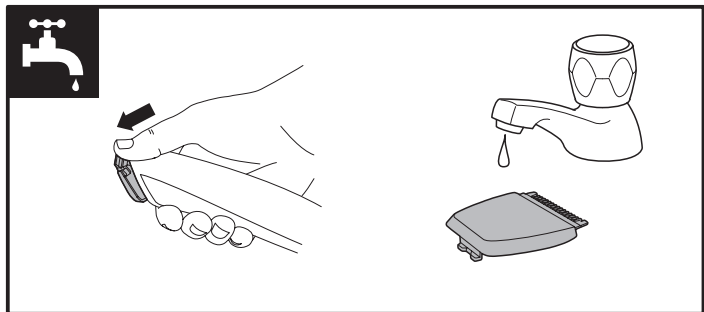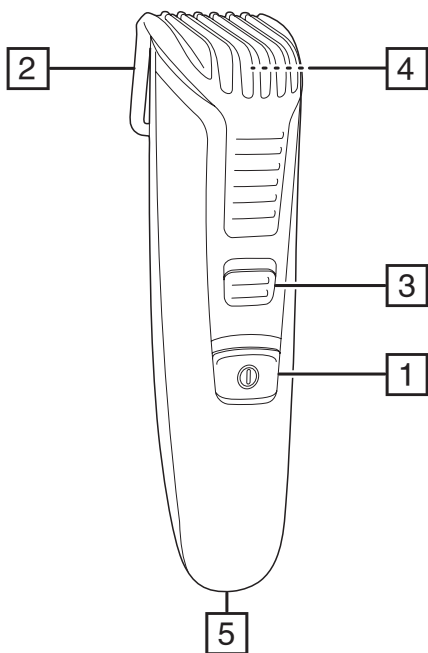


A**B****C****D**

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
 - Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
 - The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
 - Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
 - Only use the adapter supplied to charge the appliance.
 - Always replace a damaged adaptor with one of the original type.
 - Keep the appliance and the adapter dry.

 - This appliance should never be left unattended when plugged into a power outlet, except when charging.
 - Do not plug or unplug the appliance with wet hands.
 - Do not use attachments other than those we supply.
 - This appliance is not intended for commercial or salon use.
-  The blades are washable under a running tap.
- Please note the main body of the trimmer is not washable and should be kept away from water.

PARTS

- | | |
|--------------------------------|-------------------|
| 1. On/Off switch | <i>Not shown:</i> |
| 2. Adjustable comb | • Cleaning brush |
| 3. Adjustable comb lock switch | • Adaptor |
| 4. Trimmer assembly | • EDGESTyler |
| 5. Charging indicator | |
-

GETTING STARTED

CHARGING YOUR APPLIANCE

- Before using your trimmer for the first time, charge for 14-16 hours.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- The charging indicator will illuminate.

Charging	LED will illuminate
Fully Charged	LED will stay illuminated

- Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
 - To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.
 - On a full charge the trimmer will run in cordless mode for up to 40 minutes.
 - Allow 14-16 hours for a full charge.
 - NOTE: this product is rechargeable only and cannot be used in corded mode.
-

INSTRUCTIONS FOR USE

BEFORE YOU BEGIN

- Always comb your beard or moustache with a fine comb before you start trimming.
- Adjusting the trim length.
- The trimmer can be adjusted to give you 9 different trim lengths.

Comb Position	Cutting Length
1	1.5mm
2	3mm
3	5mm
4	7mm

Comb Position	Cutting Length
5	9mm
6	11mm
7	13mm
8	15mm
9	18mm

- Note: Use the beard trimmer without the adjustable comb for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.

ATTACHING AND REMOVING THE ADJUSTABLE COMB

- Ensure the trimmer is switched off.
- To attach the comb place the comb on the beard trimmer so that the teeth of the comb sit on top of the teeth of the blades.
- Slide on the comb until it sits securely on the beard trimmer.
- To remove the adjustable comb, ensure the trimmer is switched off.
- Push the back of the comb upwards and lift away from the beard trimmer.
- Note: the on/off switch controls the adjustable comb lock switch to ensure consistent grooming results. When the trimmer is turned on the comb lock switch is enabled. When the trimmer is turned off the comb lock switch is disabled. This is when the comb length is able to be adjusted.

TO THIN AND TAPER THE BEARD/MOUSTACHE

1. Attach the adjustable comb to the trimmer blade and select the desired length by sliding the adjustable comb up or down.
2. The setting will appear on the length position indicator on the comb. If you are trimming for the first time, start with the maximum trimming length setting.
3. Once you have your desired adjustable comb length turn the trimmer on, this will secure the length increment on the comb.
4. Place the flat top of the trimmer comb against the skin.
5. Slowly slide through the hair. Repeat from different directions as necessary.

TRIMMING THE NAPE OF YOUR NECK

Note: you will need a hand mirror for this operation if performing it alone.

1. Remove the adjustable comb.
2. Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the beard trimmer.

3. Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
4. Be sure to move the unit slowly when performing this operation and to keep the roots at the base of your head out of the way of the trimmer.

TO DEFINE THE BEARD/MOUSTACHE LINE

1. Hold the trimmer with the trimmer blade facing you.
2. Start with the edge of beard/moustache line and gently lower the trimmer blade onto your skin.
3. Use motions towards the edge of the beard/moustache line to trim to desired locations in facial area and away from beard in neck area.

BLADE RELEASE

1. Ensure the trimmer is switched off.
2. Remove the adjustable comb.
3. Remove the blades by pushing your thumb upwards under the blades and move the blade set away from the trimmer body.
4. To reattach the blades, align the back of the blades with the back housing at the top of the trimmer and push down until the blade set clicks into place.

TIPS FOR BEST RESULTS

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before use.
- Comb your hair in the direction that it grows.

USING THE EDGESTyler

The EDGESTyler tool is used to guide your trimmer to create a symmetrical, defined edge to your beard.

Neck Line (Fig. A)

Hold the appropriate curved side of the tool underneath your jaw and run your trimmer along it for a clean edge. Repeat on the other side then even up the remaining V left under the chin freehand.

Cheek (Fig. B)

Hold the appropriate curved side of the tool against the cheek and run your trimmer along it for a clean edge. Repeat on the other side of your face.

Sideburn (Fig. C)

Use the straight edge of the tool against the sideburn for perfect, straight edges.

Moustache (Fig. D)

Use the curved edge of the tool to sculpt the moustache area.

CARING FOR YOUR TRIMMER

- To ensure long lasting performance of the trimmer, clean the blades and unit regularly.
 - Ensure the appliance is switched off and unplugged from the mains.
 - Do not use harsh or abrasive cleaners on the unit or blades.
 - This product has washable blades. Ensure the blades are detached from the trimmer before washing the blades.
 - Wash the blades under a running tap to remove any hair clippings.
 - After rinsing under a tap ensure the blades are dry.
 - Do not rinse while the product is connected to the mains.
 - Please note the main body of the trimmer is not washable and should be kept away from water.
 - After each use, it is recommended to clean hair from the blades either by rinsing the blades or using a cleaning brush.
-

BATTERY REMOVAL

- The appliance must be disconnected from the supply mains when removing the battery.
- Turn the trimmer on and discharge all remaining power.
- Remove the comb attachment.
- Detach the blade cartridge.
- Remove the blade clip using a screwdriver.
- Pry the decorative panel off the top housing to expose the 2 screws located toward the lower end.
- Unscrew the 2 screws.
- Pry the two halves of the housing apart from one another to expose the internals.
- Unscrew the 4 screws on the circuit board.
- Disconnect the battery from the circuit board.
- The battery is to be disposed of safely.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.


SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
<https://ie.remington-europe.com>

Ref. No. MB4128

Type No. MB4125

19/UK/ MB4128 T22-7000991 Version 04 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2019 Spectrum Brands, Inc.