

# REMINGTON®

## Groom Kit



**PG6130**

 [www.remington.co.uk](http://www.remington.co.uk)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.



4

5

6

8

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor supplied.
- Always replace a damaged adaptor with one of the original type.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

1. On/off switch
  2. Groomer
  3. Wide trimmer
  4. Detail trimmer
  5. Minifoil shaver
  6. Nose, ear, eyebrow trimmer
  7. Attachment guide combs
  8. Adjustable comb for wide trimmer
  9. Charging indicator
  10. Stand (not shown)
  11. Adaptor (not shown)
- 

## GETTING STARTED

---

### CHARGING YOUR GROOMER

1. Ensure the product is switched off.
2. Before using your groomer for the first time, charge for 14-16 hours.
3. Connect the charging stand to the adaptor and then to the mains.

### CHARGING INDICATOR

Charge Level	Indicator
Charging	LED will illuminate
Full charge	LED will remain illuminated

- Run time from fully charged is up to 40 minutes.
  - Your appliance cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
  - Fully recharge your appliance for 16 hours when you would like to use it again.
  - To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.
- 

## INSTRUCTIONS FOR USE

---

Please note that this product is for cordless use only and cannot be used when connected to the mains.

Switch the product on by sliding up the on/off switch.

### TO ATTACH AND REMOVE THE TRIMMING ATTACHMENTS

**Note:** Always ensure the groomer is switched off before changing any attachments.

- To attach place the desired trimming head on top of the groomer and rotate clockwise to lock into place
- To remove rotate the trimmer head anti-clockwise until it unlocks and then lift off the groomer.

## **ATTACHING AND REMOVING FIXED GUIDE COMBS**

### **To Attach**

With the trimmer blade facing away from you, slide the guide comb on top of the trimmer blade and click into position.

### **To Remove**

With the trimmer blade facing away from you, carefully push the guide comb away from the trimmer blade.

## **ATTACHING AND REMOVING ADJUSTABLE COMB ON THE WIDE TRIMMER BLADE**

- To attach line up the comb rails and slot on the groomer until firmly secured. Pressing the adjustment button on the back of the comb will alter the cutting length increment, this is indicated on the comb.
- To remove press and hold the adjustment button and push the comb up and off the groomer.

## **BEFORE YOU BEGIN**

- Comb facial hair with a fine comb before you start trimming.
- Hairs should be dry and without any waxes or lotions before using the groomer.

## **TO THIN AND TAPER THE BEARD/MOUSTACHE**

1. Attach the wide trimmer blade.
2. Place either the adjustable comb or a fixed comb on the trimmer blade, select the desired length and switch on.
3. Start trimming under the chin, following the jawbone line. Work towards the ear and upper beard line using an upward motion.

## **TO TRIM EDGE OF BEARD OR MOUSTACHE**

1. Attach the trimmer blade.
2. Hold the groomer with the cutting blade facing you, perpendicular to your skin.
3. Start with edge of beard/moustache line, and with the cutting blades resting lightly against your skin, use slow movements to create a beard/moustache line.

## **TO TRIM SIDEBURNS**

1. Hold the groomer with the cutting blade facing you.
2. Select the desired length on the adjustable comb or select the desired guide combs.
3. Move the groomer along the comb to cut the hairs. Use light pressure and well-controlled movements to trim hair.

## **TRIMMING THE NAPE OF YOUR NECK**

1. Attach the trimmer blade.
2. Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.

3. Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
4. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

#### **USING THE MINI FOIL SHAVER**

- Hold the groomer so the mini foil shaver gently touches your face.
- Use short, well-controlled movements to shave around your beard/moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.

**Note:** The mini foil shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face.

For a close comfortable shave, guaranteed, use one of Remington's electric shavers.

#### **TO REMOVE HAIR FROM NOSE AND EAR**

1. Attach the nose, ear, eyebrow attachment.
  2. Insert the groomer's cutting unit gently into the nostril or ear.
  3. Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

#### **TO REMOVE HAIR FROM EYEBROWS**

1. Attach the nose, ear, eyebrow attachment.
  2. Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely lower onto the skin and move over desired area.

#### **USING THE DETAIL ATTACHMENT**

- Hold the groomer with the surface (back side) of the blade guides against the skin.
- Do not use the detail attachment head with the blades perpendicular to the skin.
- Use motions similar to using a wet blade to provide the closest trim.
- **Note:** The detail trimmer has Trim Shave Technology which trims hair to 0.2mm giving you that shaven look without the irritation wet blade shaving causes.
- The plastic in front of the blades helps to stretch the skin to achieve the close cut.

---

### **TIPS FOR BEST RESULTS**

---

- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- After trimming, lightly go over the trimmed areas with the foil to get a smooth clean finish.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.

---

## CARE FOR YOUR GROOMER

---

Care for your product to ensure a long lasting performance. We recommend that you clean your groomer after each use.

### AFTER EACH USE

- Brush any accumulated hairs from the groomer and attachment heads.
- The easiest and most hygienic way to clean the groomer is by detaching the head from the groomer body and rinsing the head with warm water.
- The groomer body should not be rinsed.
- Place one or two drops of cutter oil or sewing machine oil on the blades.
- Turn the clipper on to distribute the oil evenly, wipe off any excess oil.

---

## BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the trimmer is discharged of all power.
- Remove the attachment head from the appliance.
- Using a small screwdriver, pry off the front housing carefully.
- Open the rear housing to expose the printed circuit board.
- Cut the wires which connect the battery to the circuit board and remove the battery.
- The battery is to be disposed of safely.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.




---

## SERVICE CENTRE


---

### UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK  
[www.remington.co.uk](http://www.remington.co.uk)

### IRELAND

 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12  
<https://ie.remington-europe.com>





# Model No. PG6130

19/UK/ PG6130 T22-7000579 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2019 Spectrum Brands, Inc.