


# REMINGTON®

EST. NEW YORK 1937

## PROLUXE SALON STRAIGHTENER

 Intelligent PROheat Sensor Technology provides consistent heat for salon results that last all day\*



USE & CARE  
MANUAL

PLEASE READ  
PRIOR TO USE

To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

\*Style shown to last 24 hours in laboratory trials

5 YEAR WARRANTY

S9100AU

## IMPORTANT SAFEGUARDS

**Warning: When the straightener is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the straightener is switched off.**

**When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:**

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER**

**DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

**WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, and FIRE, OR INJURY TO PERSONS.**

- Your straightener should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.

- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Burn hazard - Keep appliance out of reach from young children, particularly during use and cool down.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- The plates will be very hot during use. Do not let bare skin touch heated surfaces.
- Do not place the heated straightener on any soft surface such as a bed, carpet or a towel. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

## **SAVE THESE INSTRUCTIONS**

## S9100AU PROLUXE SALON STRAIGHTENER

### USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® PROLUXE Salon Straightener. The PROLUXE Salon Straightener features Intelligent PROheat Sensor Technology for salon results that last all day\*.



### KEY PARTS

- |   |                                |
|---|--------------------------------|
| 1. Ultimate glide ceramic                             | 5. On/off button               |
| 2. Floating plates                                    | 6. Digital temperature display |
| 3. + Temperature increase/<br>PRO+ button             | 7. Hinge lock                  |
| 4. - Temperature decrease/<br>temperature lock button | 8. Salon swivel cord           |

\*Style shown to last 24 hours in laboratory trials

## **BASIC HAIR CARE INSTRUCTIONS**

For optimal results, shampoo and condition your hair prior to straightening, then dry your hair thoroughly and make sure that it is tangle free.

Note: The PROLUXE Salon Straightener is not suitable for use on synthetic wigs or hair extensions.

## **INTELLIGENT PROHEAT SENSOR TECHNOLOGY**

The intelligent PROheat sensor ensures consistent heat is delivered when styling from root to tip. This straightener features an additional sensor that detects when the temperature is dropping due to open plates, and boosts the temperature back up. This ensures that optimum heat is delivered as you glide down the strand, to achieve:

- Salon results that last 24 hours\*
- 47% straighter hair in one pass\*\*

The Intelligent PROheat sensor works automatically when the straightener is turned on.

## **PRO+ SETTING AT 185°C**

This straightener is programmed with a PRO+ setting at 185°C to allow for healthy styling while allowing you to achieve longer lasting styles and straighter hair in one pass\*\*. To activate the PRO+ setting, hold down the '+' temperature increase button for 2 seconds, where you will then see "PRO" appear on the screen.

## **TEMPERATURE LOCK**

The PROLUXE Salon Straightener has a temperature lock to prevent the selected temperature from being accidentally altered during use. When the selected temperature has been reached, simply press and hold the '-' temperature decrease button for 2 seconds. This will lock the current heat setting and a padlock icon will appear on the digital display.

To unlock the temperature lock, simply press and hold the '-' temperature button for 2 seconds.

## **MEMORY FUNCTION**

Each time you use the product it will automatically set itself to the last temperature used.

## **AUTOMATIC SAFETY SHUT OFF**

If the straightener is not used for a period of 60 minutes (temperature is constant) it will automatically shut off.

## **AUTOMATIC WORLDWIDE VOLTAGE**

The PROLUXE Salon Straightener features automatic voltage adjustment for international use. Plug the unit into any domestic power outlet and it will adjust automatically to the voltage being supplied.

NOTE: Some countries will require the use of a plug adaptor that is not included with your straightener.

## **HINGE LOCK**

Safely store your straightener with the plates locked together.

To lock, slide the switch towards the straightener. To unlock, slide the switch towards the cord.

NOTE: Do not heat the straightener in the locked position.





## **HOW TO USE YOUR REMINGTON® PROLUXE SALON STRAIGHTENER**

1. Before use, ensure the hair is clean, dry and tangle-free.
2. Section the hair prior to styling. Style the lower layers first.
3. Plug the product into the mains power supply, and press and hold down the on/off button.
4. Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the product.
5. Recommended temperatures are indicated by the hair strand symbols on the right hand side of the temperature display. '+' increases the temperature '-'decreases the temperature.
6. Holding down the '+' button for 2 seconds will activate the PRO+ setting at 185°C. Use this setting on normal to thick hair for healthy styles that last 24 hours\*. Holding down the '-' button for 2 seconds will activate the temperature lock function. Use this to avoid accidentally altering the temperature during use.
7. The digital display will stop flashing when the product is ready to use.

\*Style shown to last 24 hours in laboratory trials

8. Working on one section at a time, run the straightener through the entire length of the hair without stopping. Repeat until the desired amount of straightening has been achieved.
9. After use, press and hold the on/off button for 2 seconds to turn off, then unplug the appliance.

## RECOMMENDED TEMPERATURES

Symbol	Temperature	Hair type
	150°C - 170°C	Thin/ fine, damaged or chemically treated hair
	180°C - 200°C	Normal, healthy hair
	210°C - 230°C	Thick and difficult to style hair
	PRO+ setting to 185°C	Normal to thick hair for healthy styling that lasts 24 hours*

## MAINTENANCE

This straightener is designed for household use and is virtually maintenance free.

If cleaning becomes necessary, disconnect the straightener from the power outlet, allow it to cool, then wipe the exterior surface and the ceramic plates with a soft damp cloth.

Do not immerse the unit in any liquid. Do not use an abrasive cleaning fluid or material to clean the high grade ceramic plates as this will scratch the surface and deteriorate the effectiveness of the surface.

\*Style shown to last 24 hours in laboratory trials

## STORAGE

When not in use, always unplug the unit from the power outlet. Allow the straightener to cool and store out of the reach of children in a safe dry place. Never wrap the power cord around the straightener as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the power plug and straightener connections. If the cord becomes twisted in use, periodically straighten it. Store your straightener with the plates locked. This will ensure that the plates are protected and prevented from being easily scratched.



**WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

**As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.**

This product conforms to radio frequency interference requirements. Any product purchased and used commercially carries a limited 90 Day Warranty.



# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of five (5) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON**<sup>®</sup>  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

①Australia 1800 623 118 (toll free)

①New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2019 Spectrum Brands Inc.

Rev. 01/19

Part No. T22-0004293-B

Type: S9100

